



Ordering Code

3000M

-

□F

Series Code
3000M
5000M

Joint Base Number
01: 1 Station
02: 2 Station
20: 20 Station