

# Hand-switching Valve



Working Pressure : 0 ~ 1.0MPa

## Ordering Code



4HV

200

-

08

-

T

**Specification Code**  
4HV: Hand-switching Valve

**Number of Places**  
200: Three-position Four-way  
300: Three-position Four-way  
400: Three-position Four-way

**Joint Pipe Code**  
08: PT1/4  
10: PT3/8  
15: PT1/2

**Install Type**  
Blank: Body of Valve Install  
T: Panel Install